


**Notice:** If your hardware box is not marked with a green dot, please use this assembly instruction


**75294** E

[www.tvilum.com](http://www.tvilum.com)

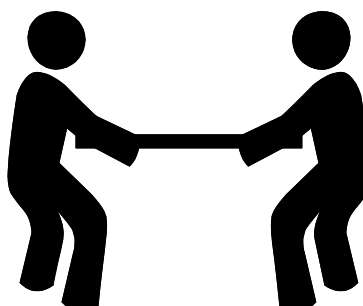

15209

x9



25408

x3



25440

x36






73002

x15




73007


x3

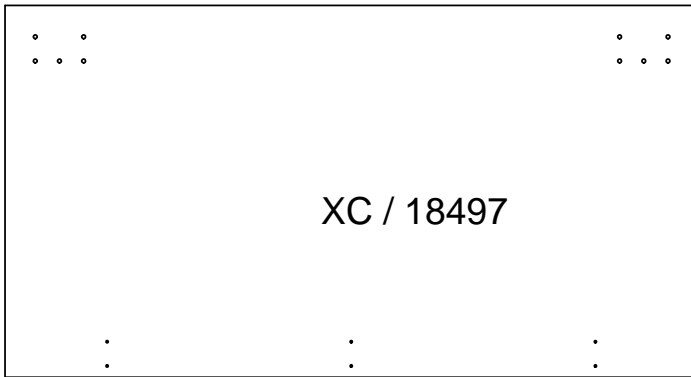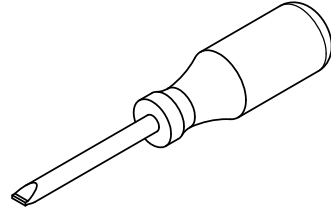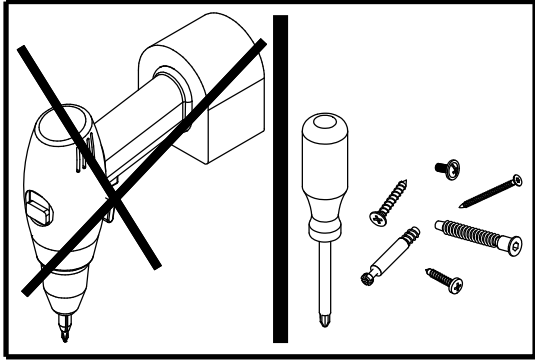

XC / 18497

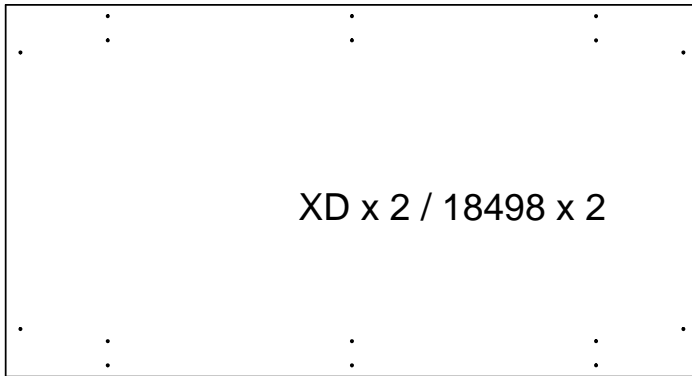


XD x 2 / 18498 x 2

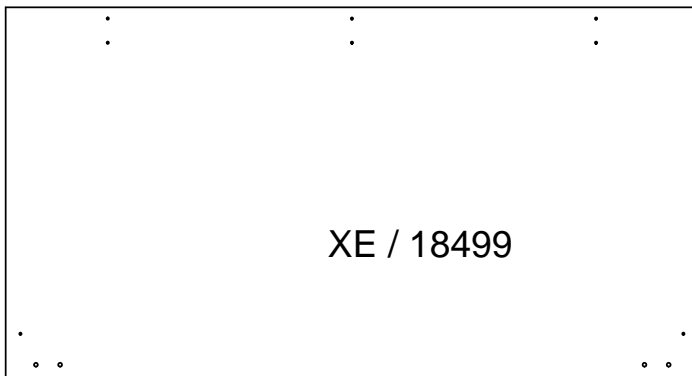


XE / 18499


1

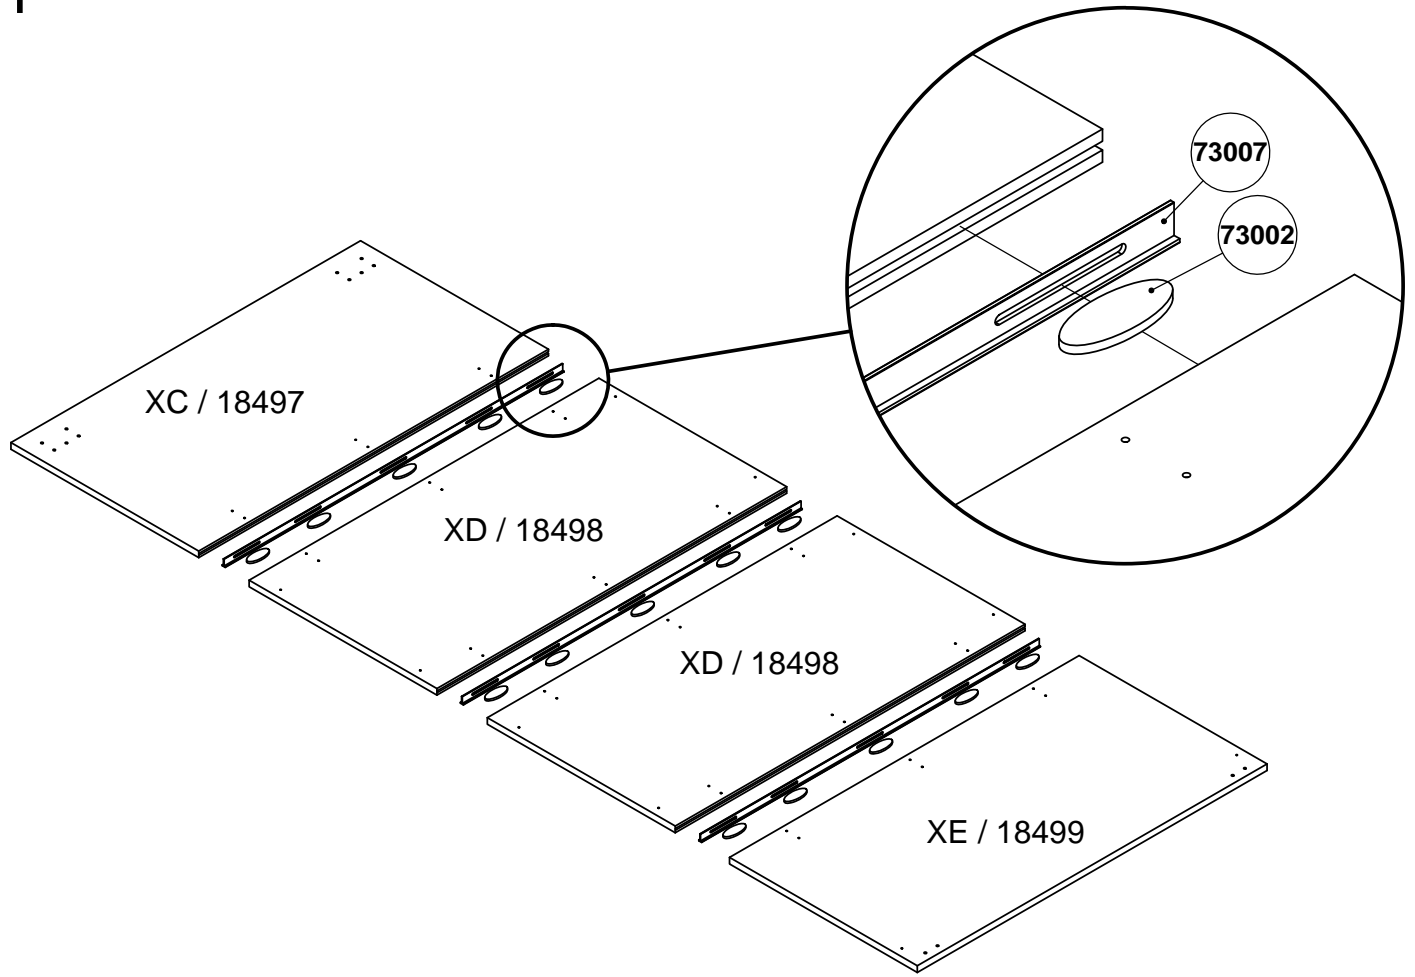


2

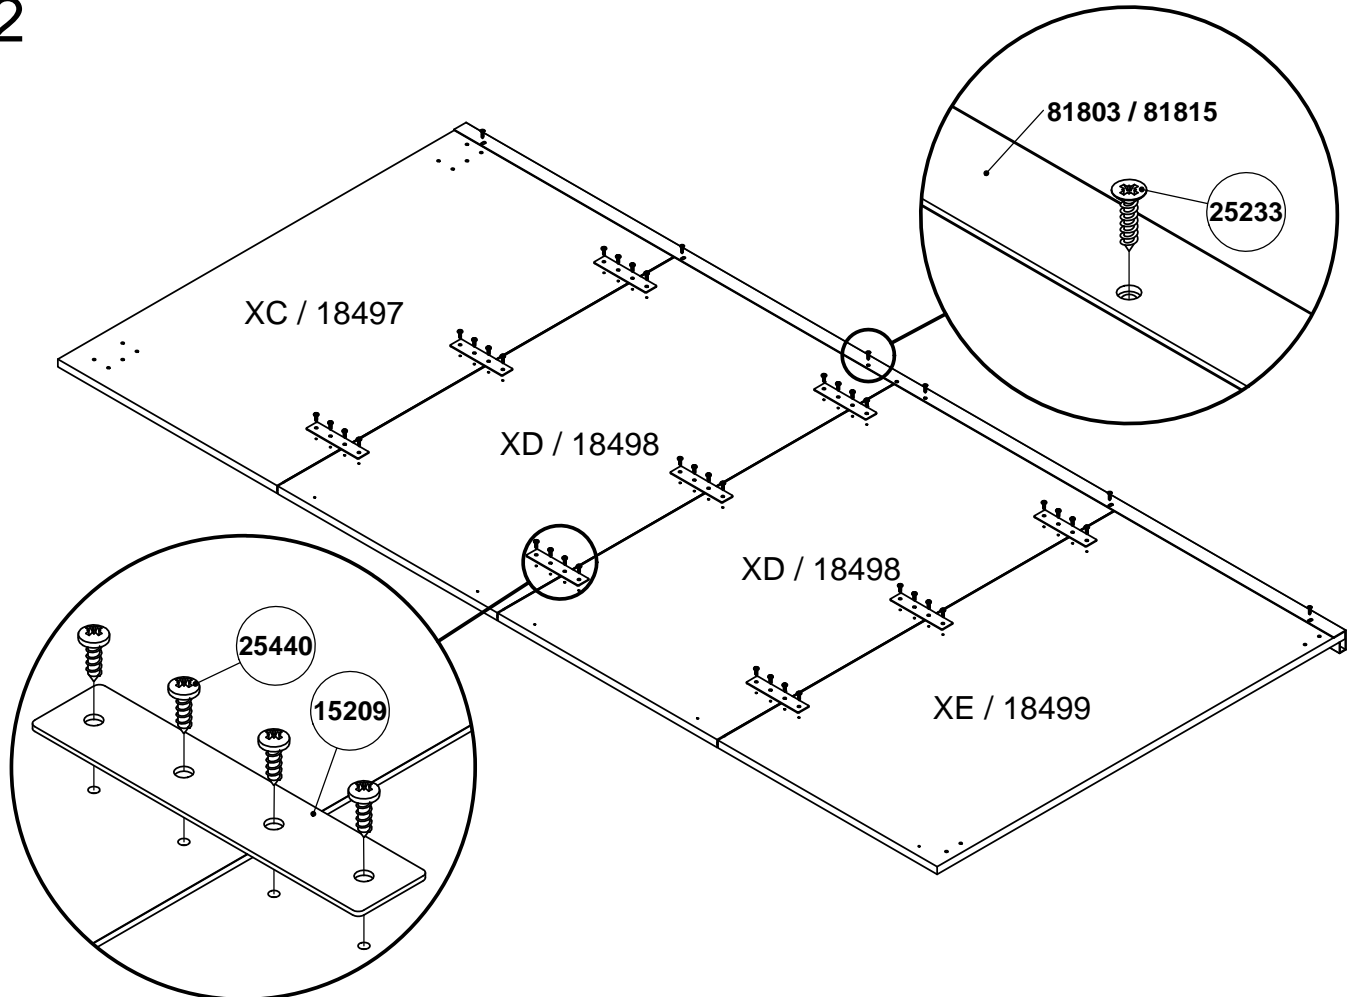


3

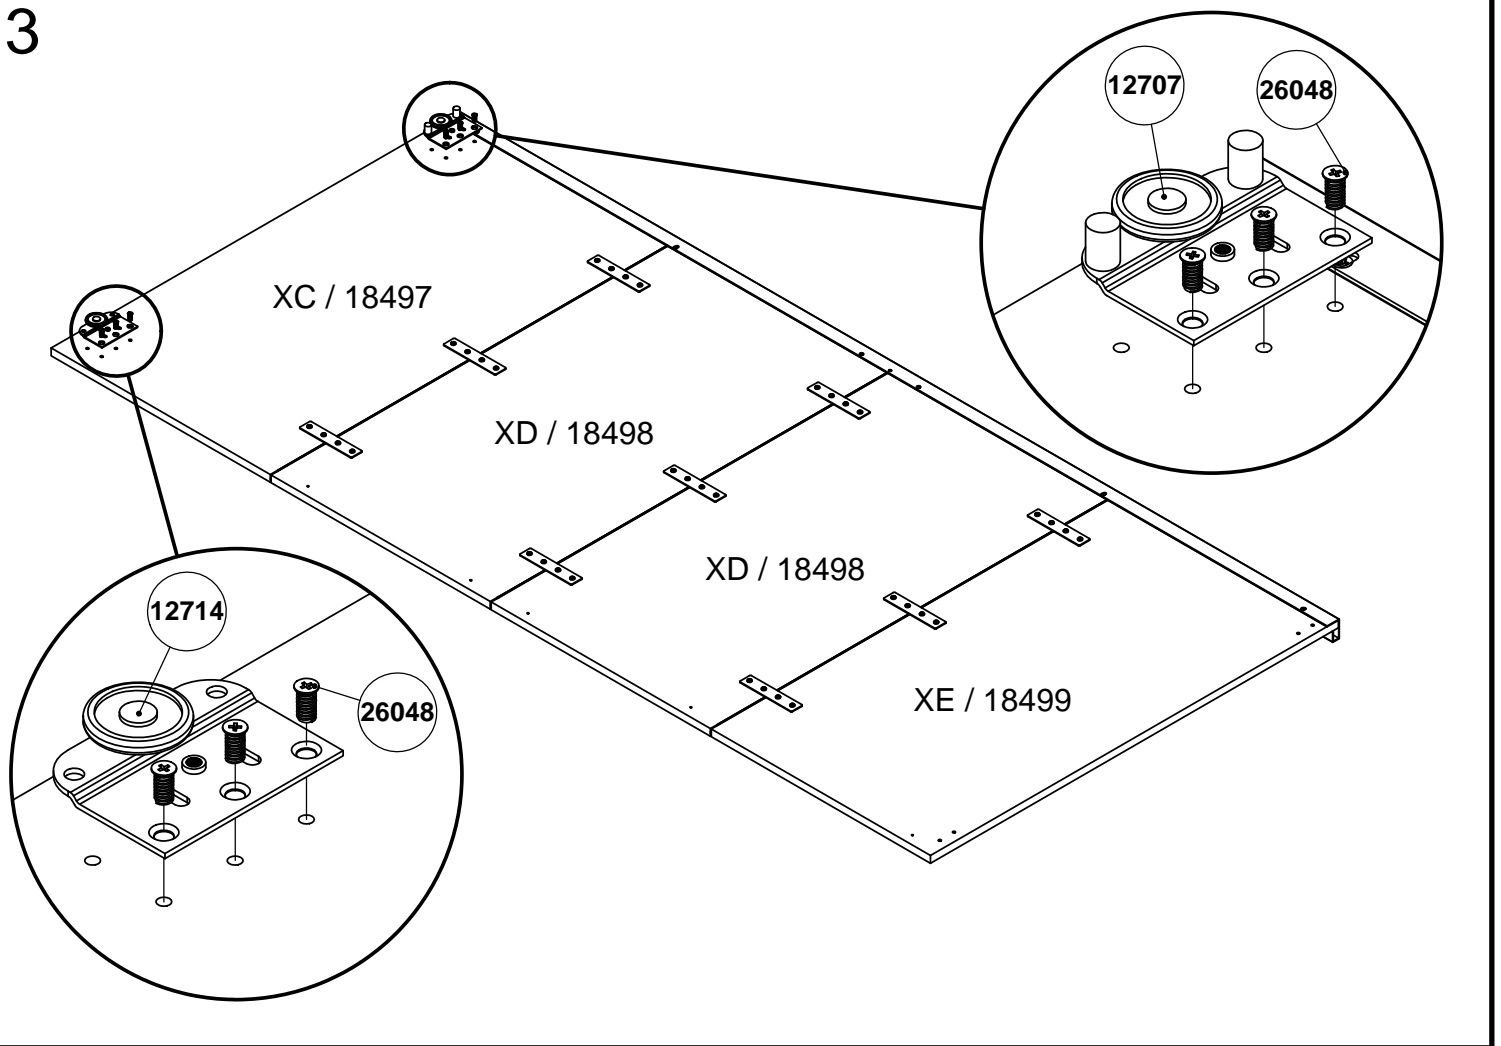


4

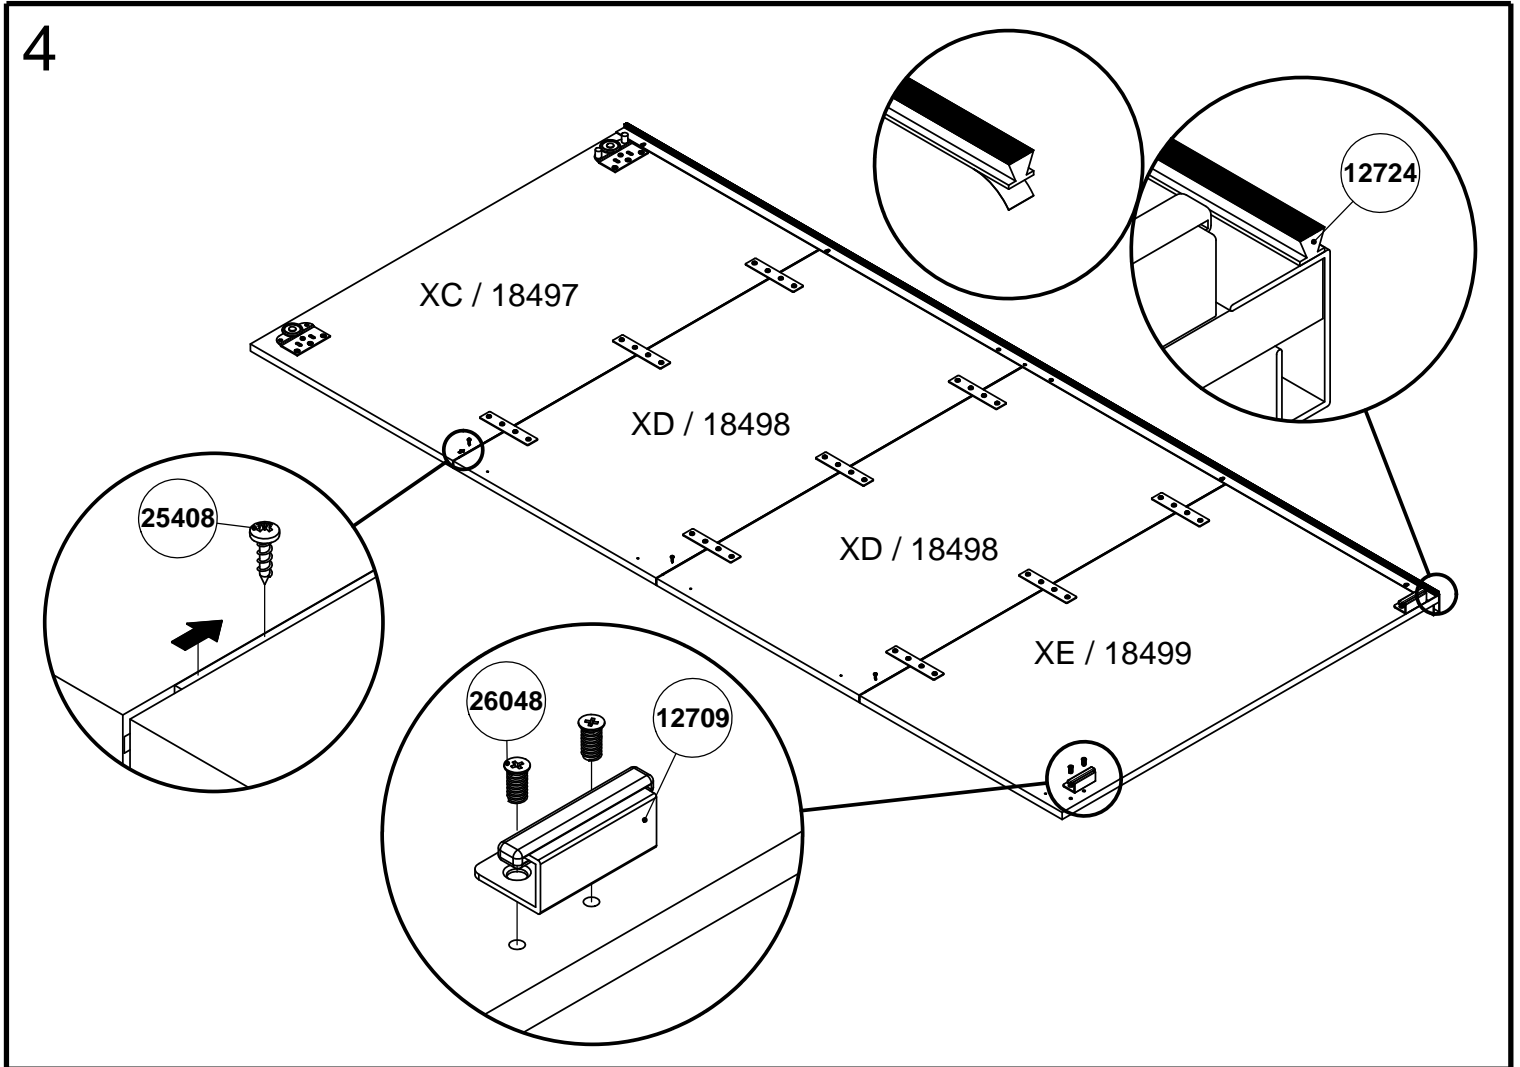


5

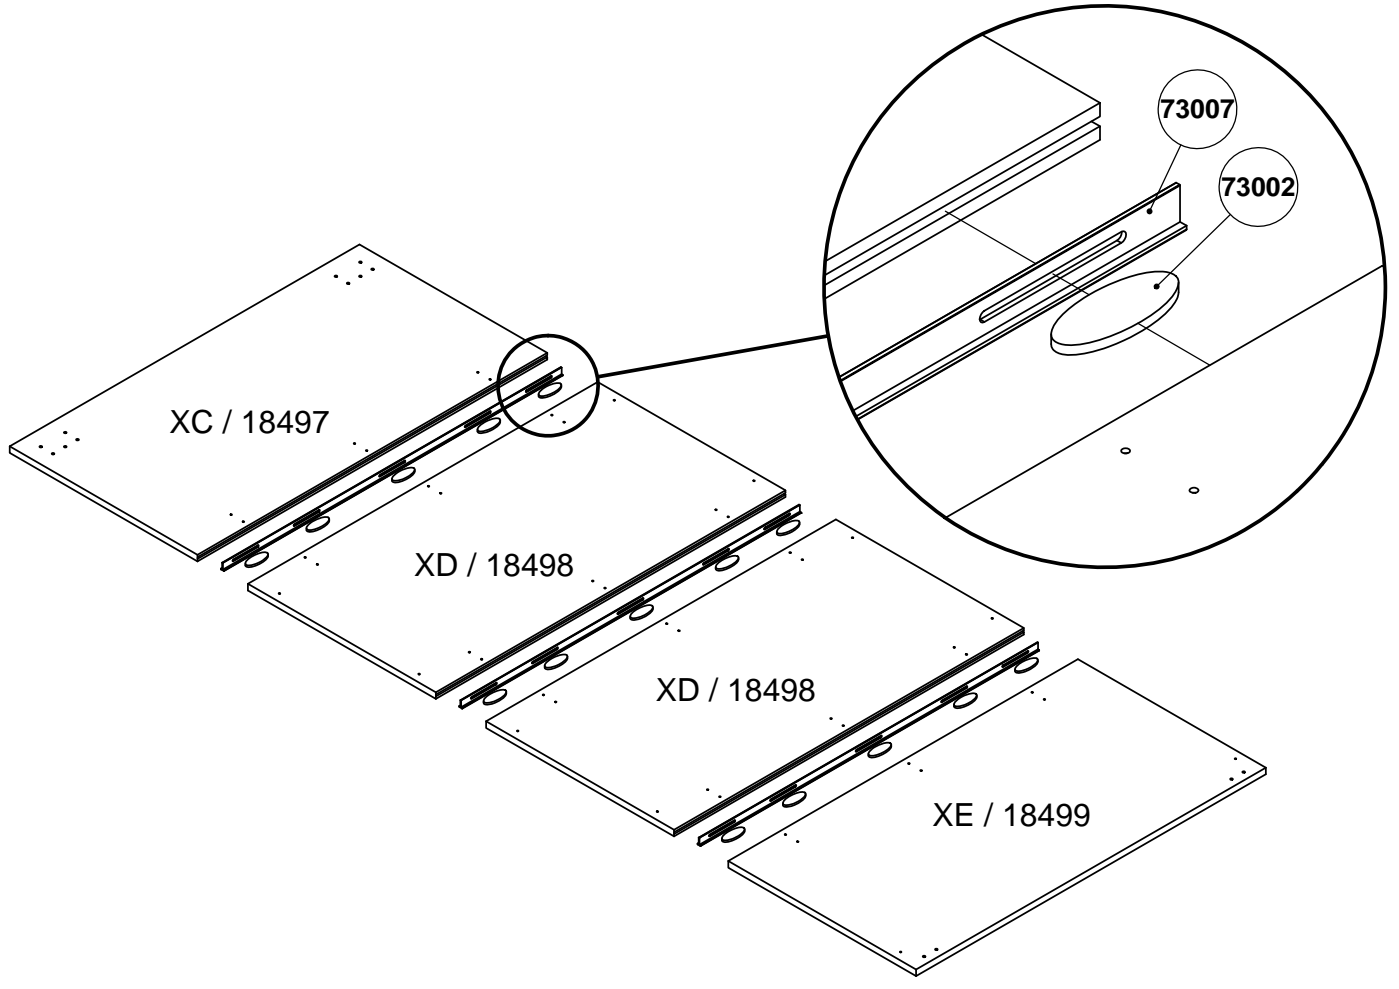


6

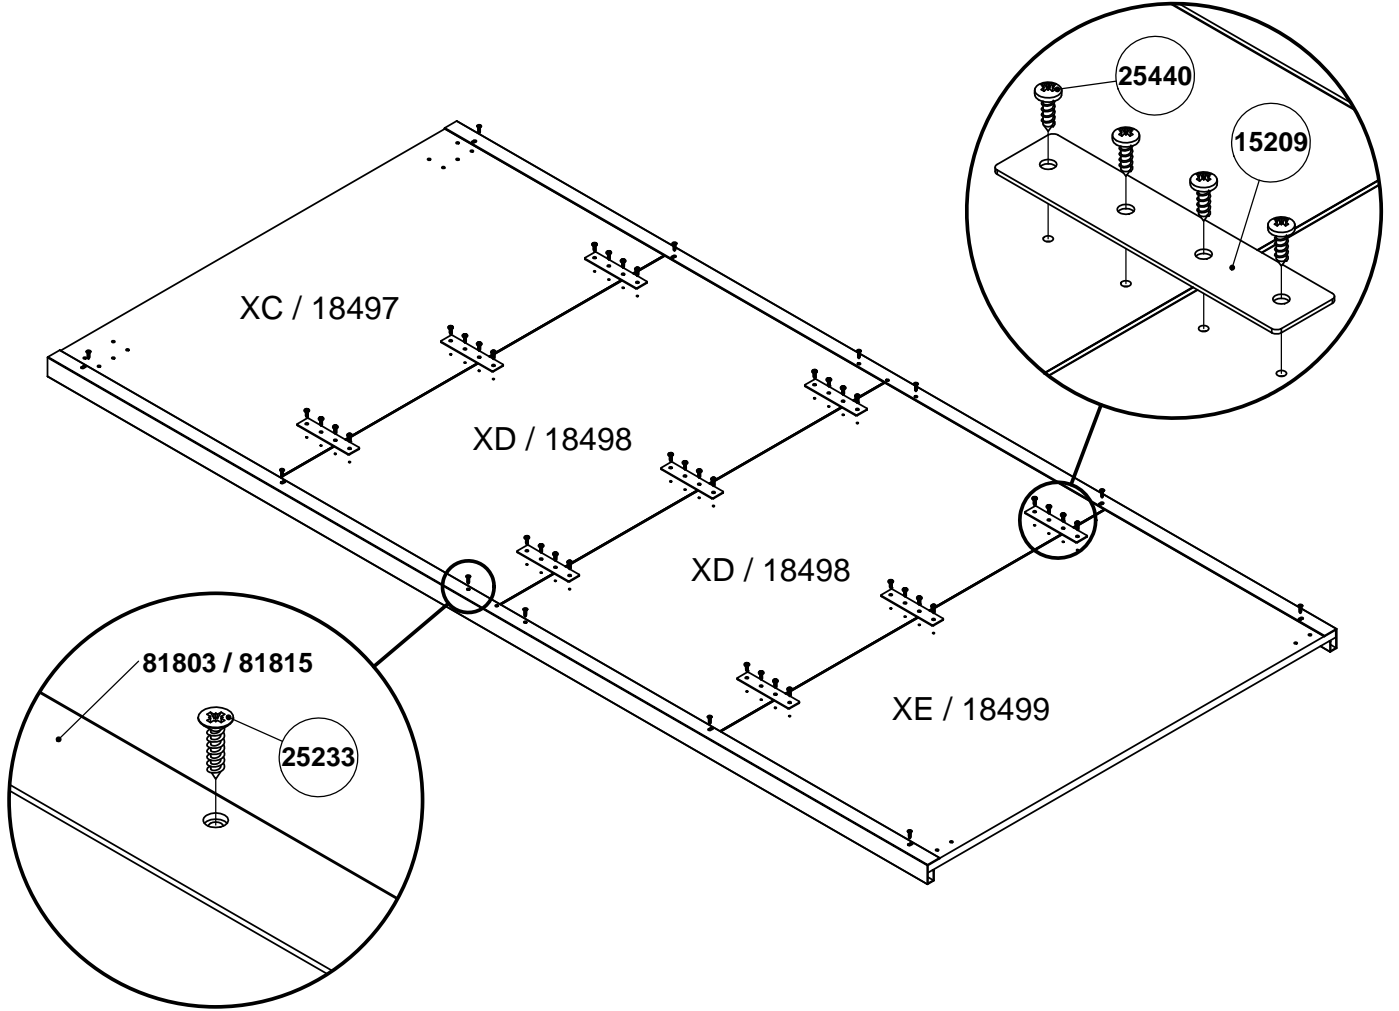


7

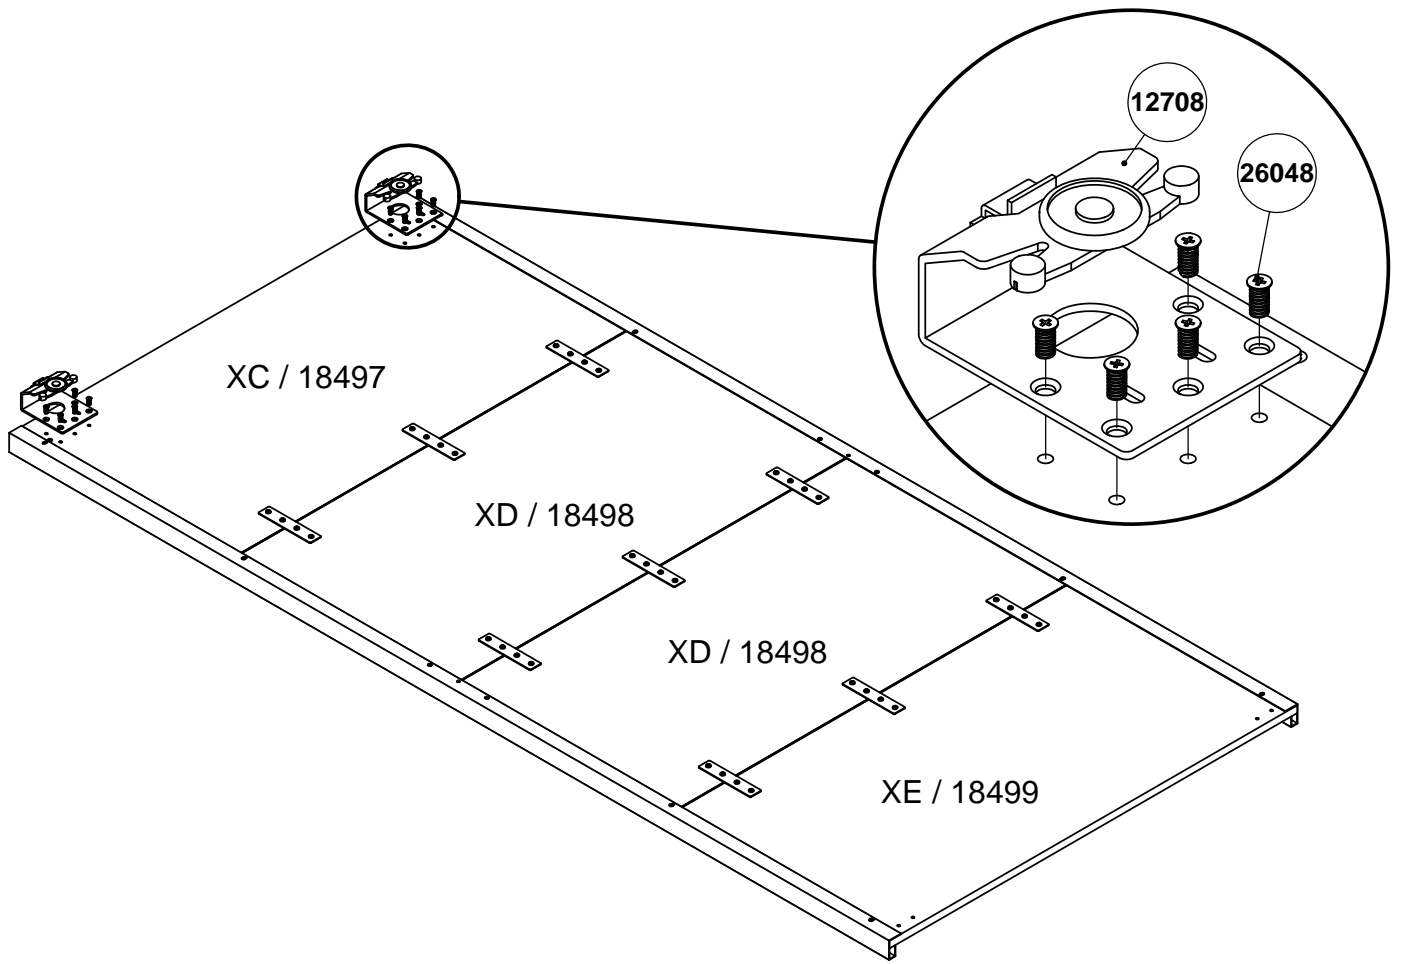


8

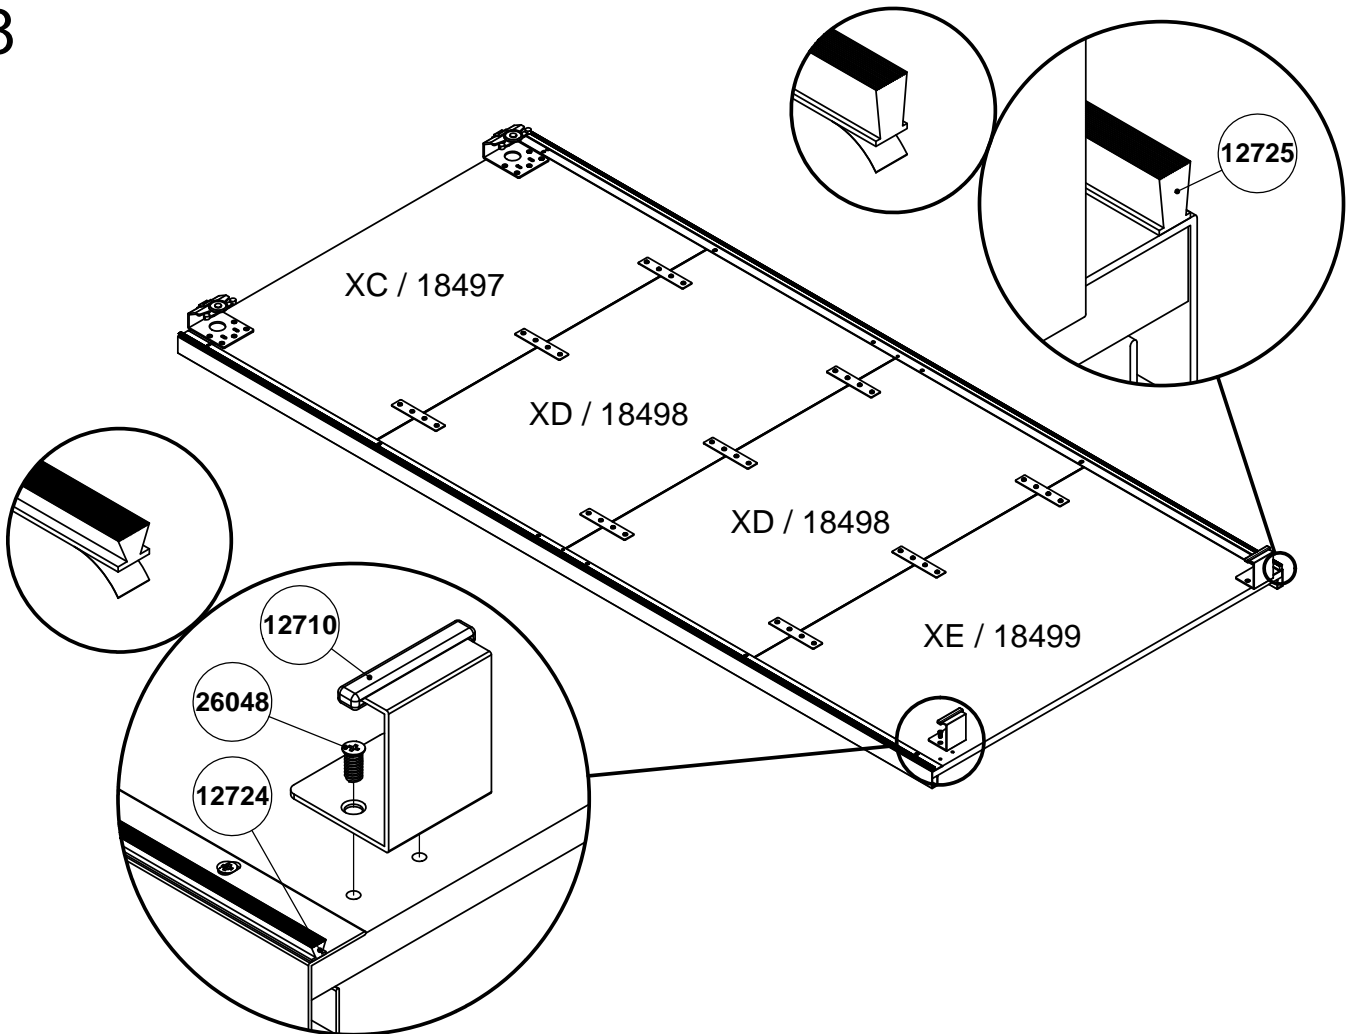


9

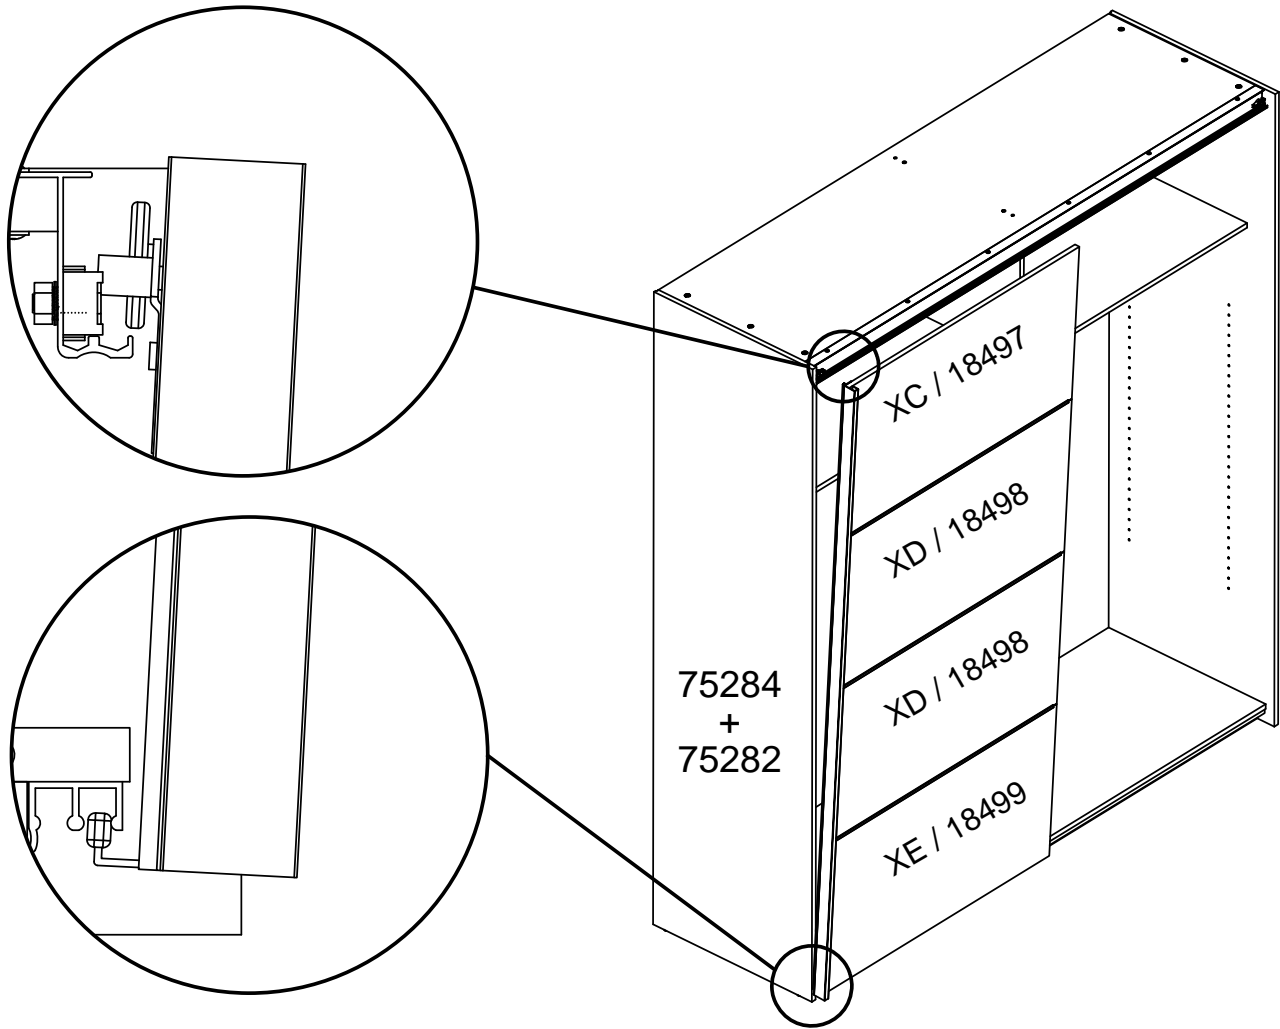

10

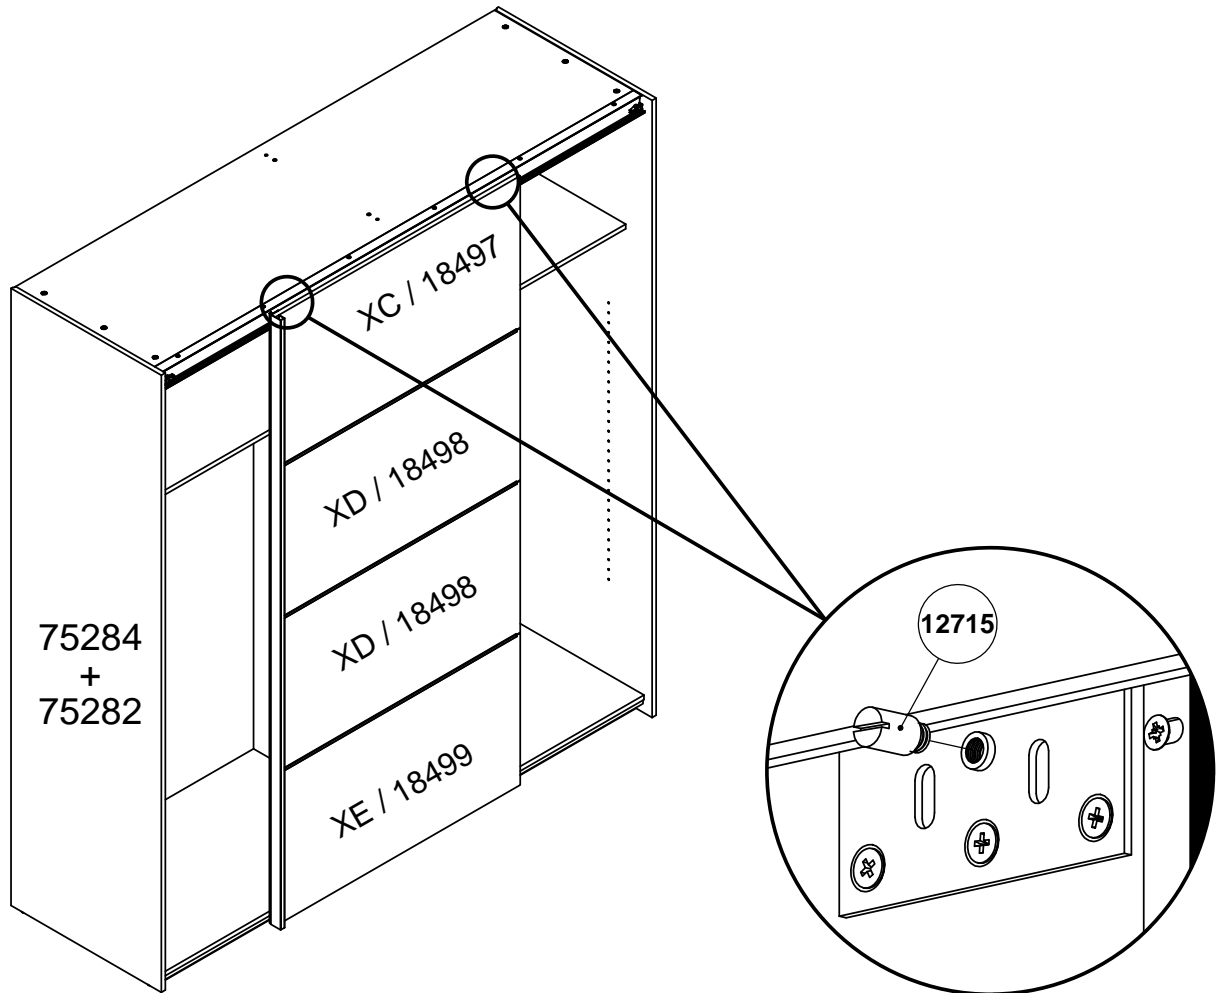

11

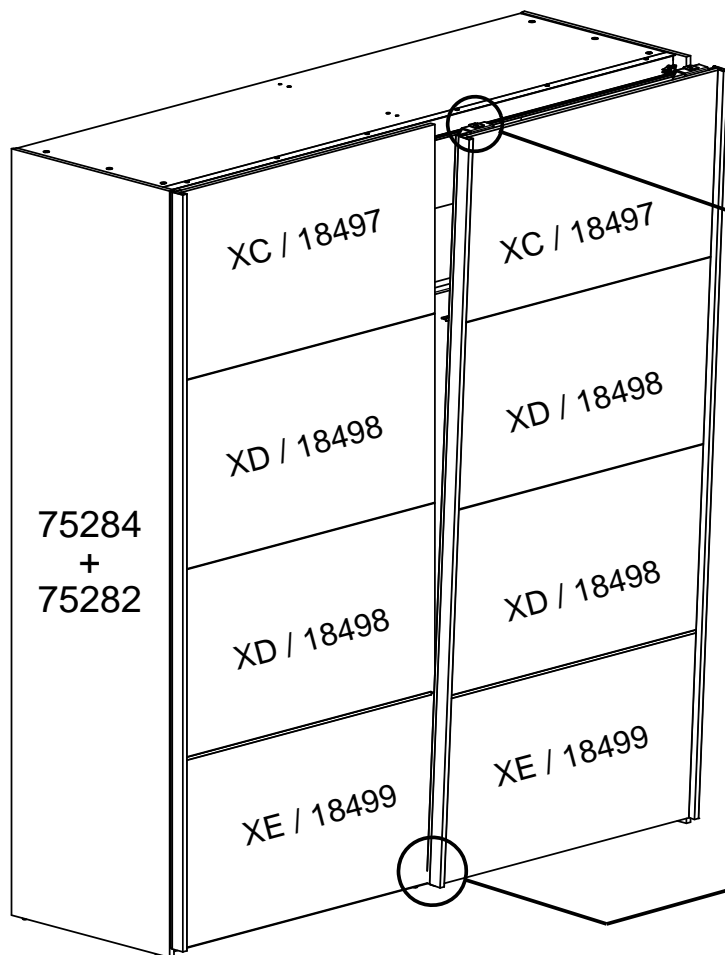

12

